


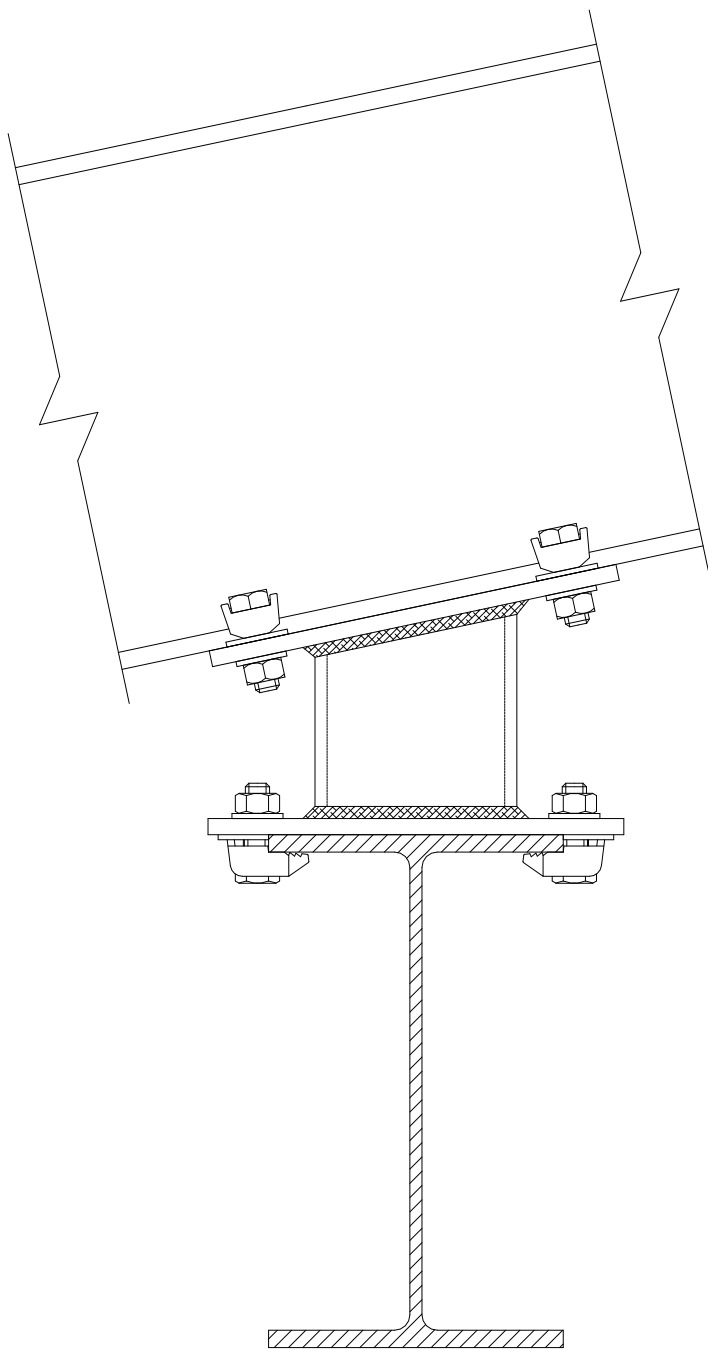

BeamClamp
UB to roof rafter using location spacer

This block is a typical type of BeamClamp steelwork connection for illustration purposes only. Please refer to our technical catalogue and/or web site for all available sizes and technical information on loading capacities. To make specifying even easier please visit our on line design tool for steelwork fixings that will detail your exact connection for you at www.beamclamp.com/resources/beamclamp-configurator

Kee Safety Ltd

Web site: www.beamclamp.com

Email: sales@beamclamp.com

T: 0044 (0) 1384 632188

F: 0044 (0) 1384 632192

