


Timber batten to form a services void and avoid service penetrations through the vapour control layer

Wallint<sup>®</sup> 50/solar air barrier/vapour control layer

Water resistant Permo<sup>®</sup> frame repels any wind-driven water that penetrates the outer cladding

Water vapour passes through Permo<sup>®</sup> frame to the vented cavity

Moisture is dispersed from the vented cavity

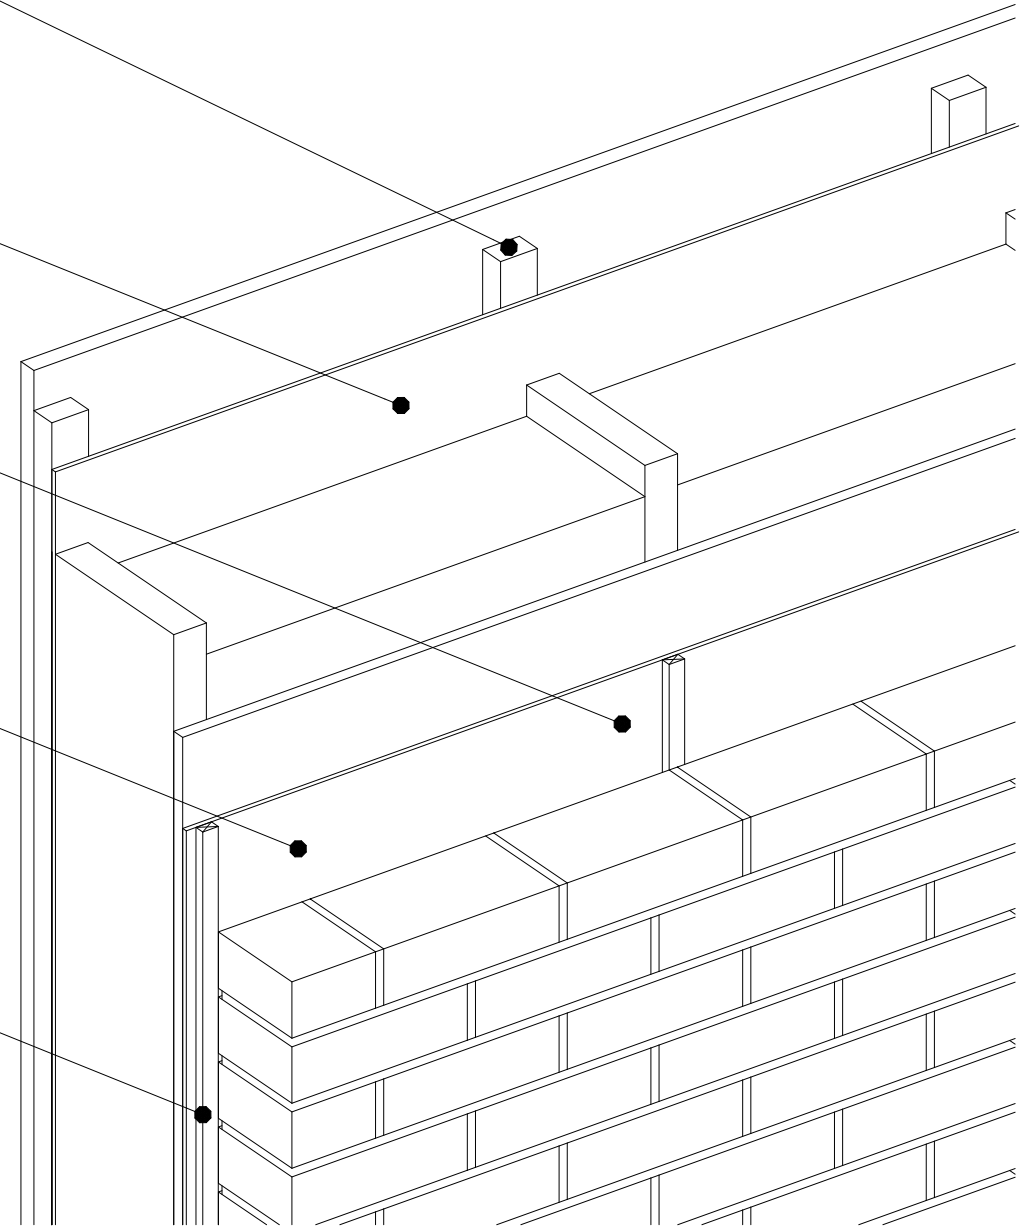

KLOBER  
TYPICAL TIMBER FRAME WALL CONSTRUCTION  
DRG No. KL004