


Lead chevron soakers
girth, cover, and lap as
recommended by
BS EN 12588:2006

Fixing in accordance with the
manufacturers printed instructions,
BS5534:2014 + A2:2018, BS8000 part 6
2013 and H62/210 and 275

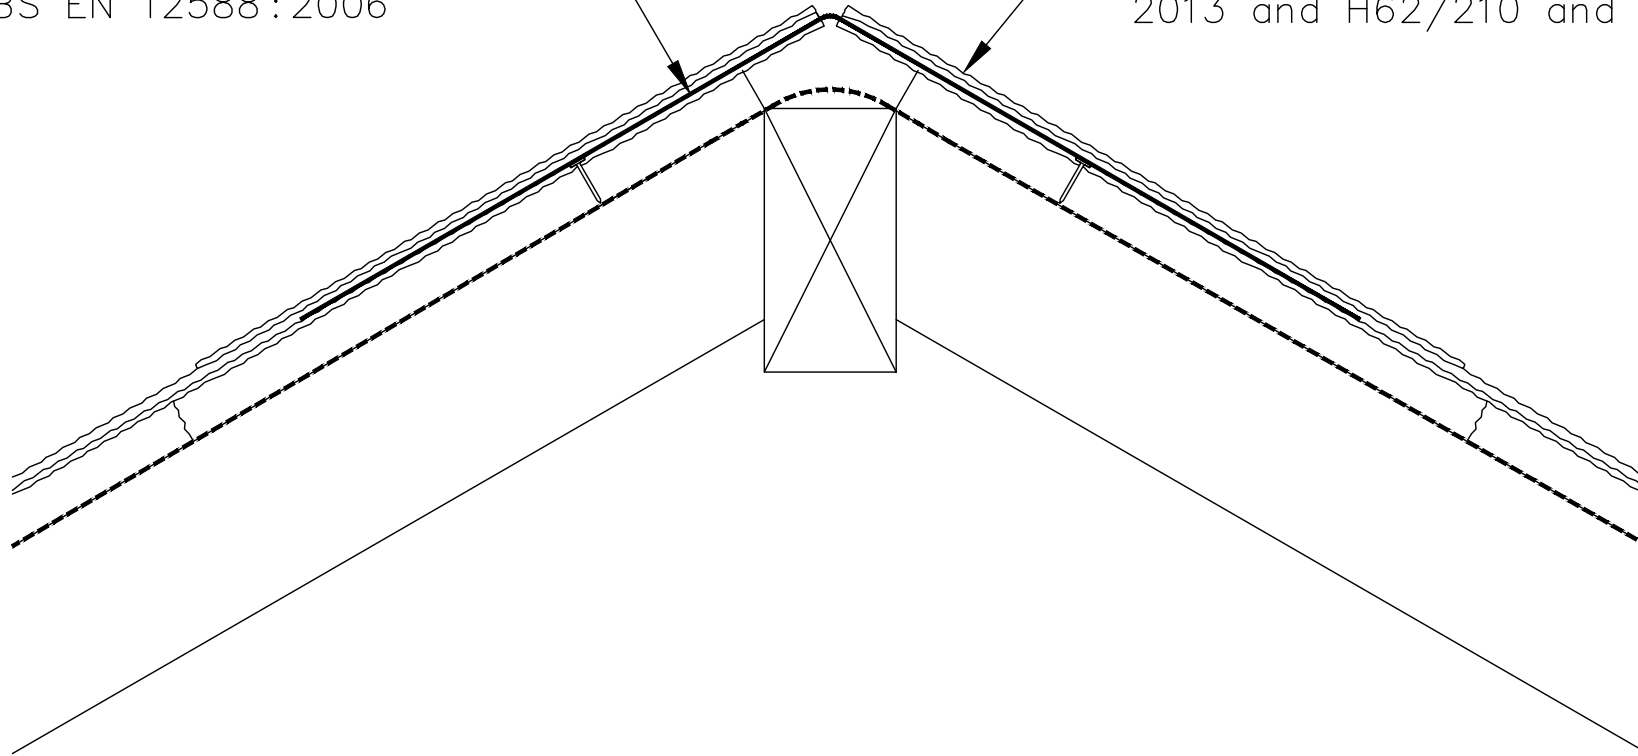

- 1: Grade slates into 3 or 4 groups of equal thickness.
- 2: Lay thicker slates at eaves, thinner towards the ridge.
- 3: Lay slates of equal thickness in the same course.
- 4: Sort slates in each group so that thin end of slates will be towards the ridge.
- 5: Hole slates from the rear.

CEMBRIT LIMITED
CLOSE MITRED HIP TYPICAL DETAIL
508x254 GLENDYNE (NATURAL SLATE)
DRG No. 540 H62/105, 280 and 525