


## 30° Roof Pitch

Fixing in accordance with the manufacturers printed instructions, BS5534:2014 + A2:2018, BS8000 part 6 2013 and H62/210 and 275

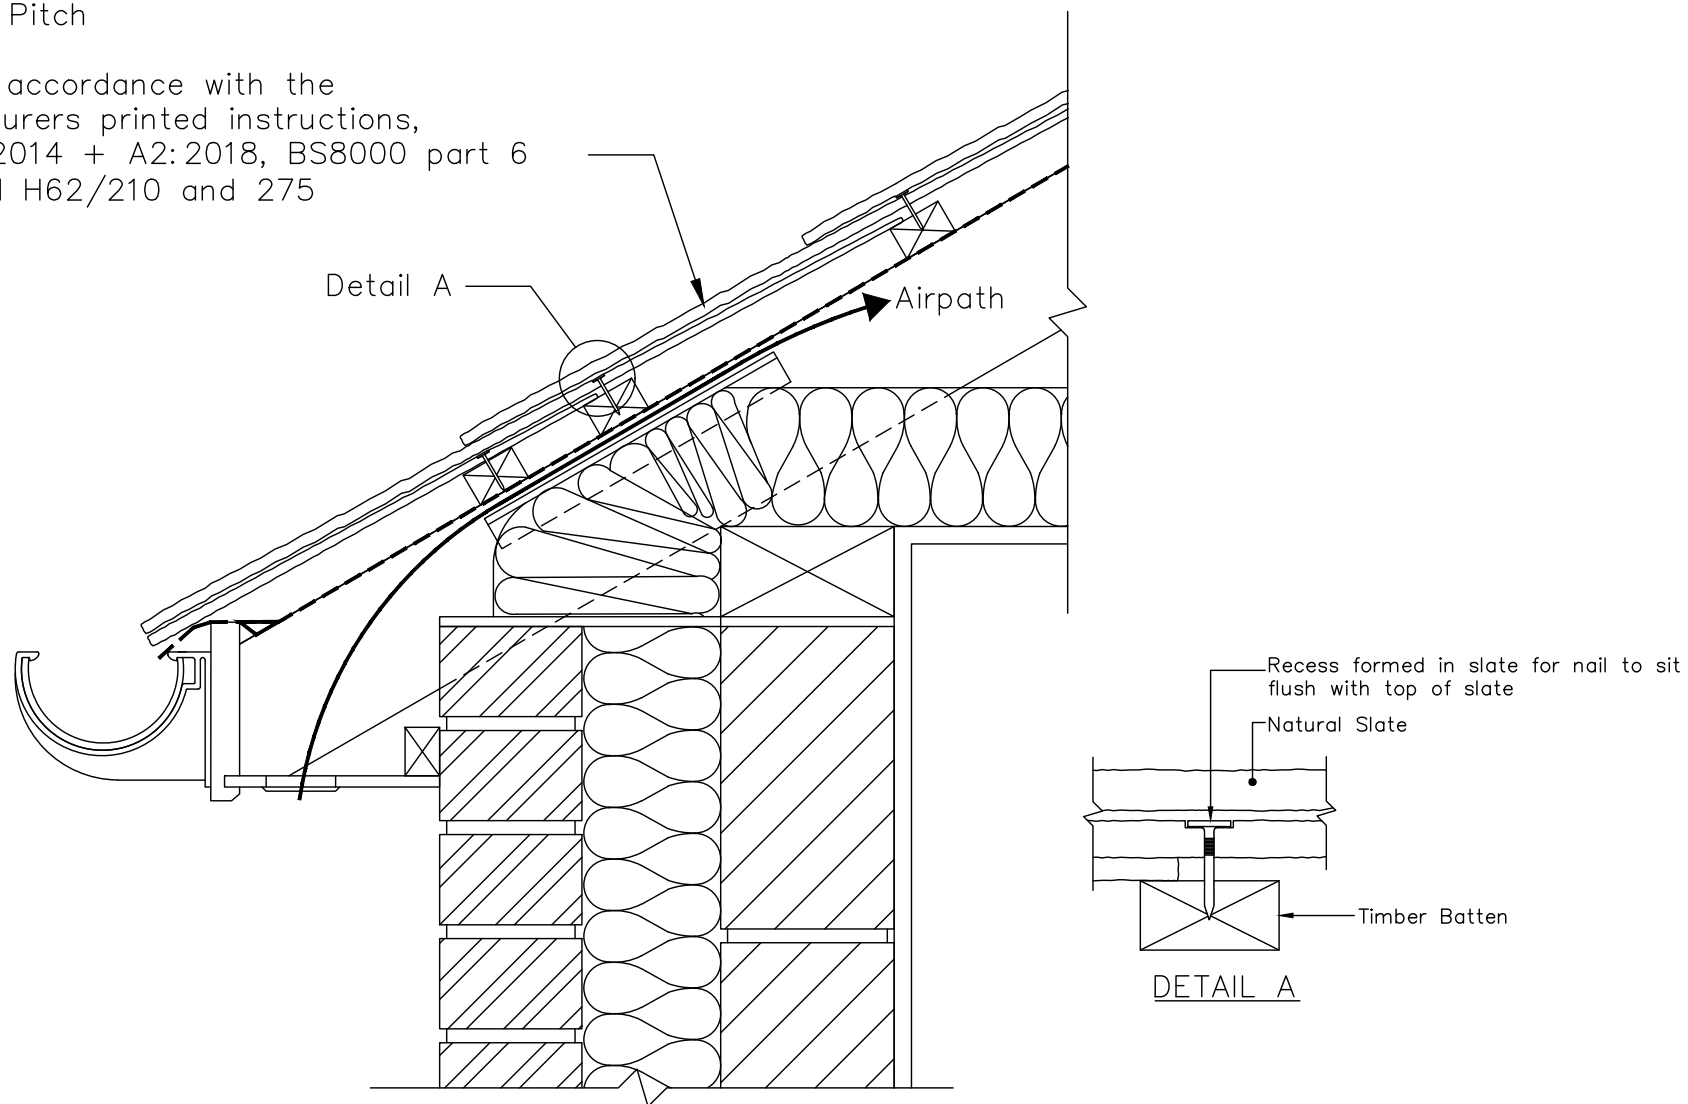

- 1: Grade slates into 3 or 4 groups of equal thickness.
- 2: Lay thicker slates at eaves, thinner towards the ridge.
- 3: Lay slates of equal thickness in the same course.
- 4: Sort slates in each group so that thin end of slates will be towards the ridge.
- 5: Hole slates from the rear.

CEMBRIT LIMITED  
EAVES SOFFIT VENT TYPICAL DETAIL  
508x254 GLENDYNE (NATURAL SLATE)  
DRG No. 500 H62/105, 280 and 355