


Fixing in accordance with the  
manufacturers printed instructions,  
BS5534:2014 + A2:2018, BS8000 part 6  
2013 and H62/210 and 275

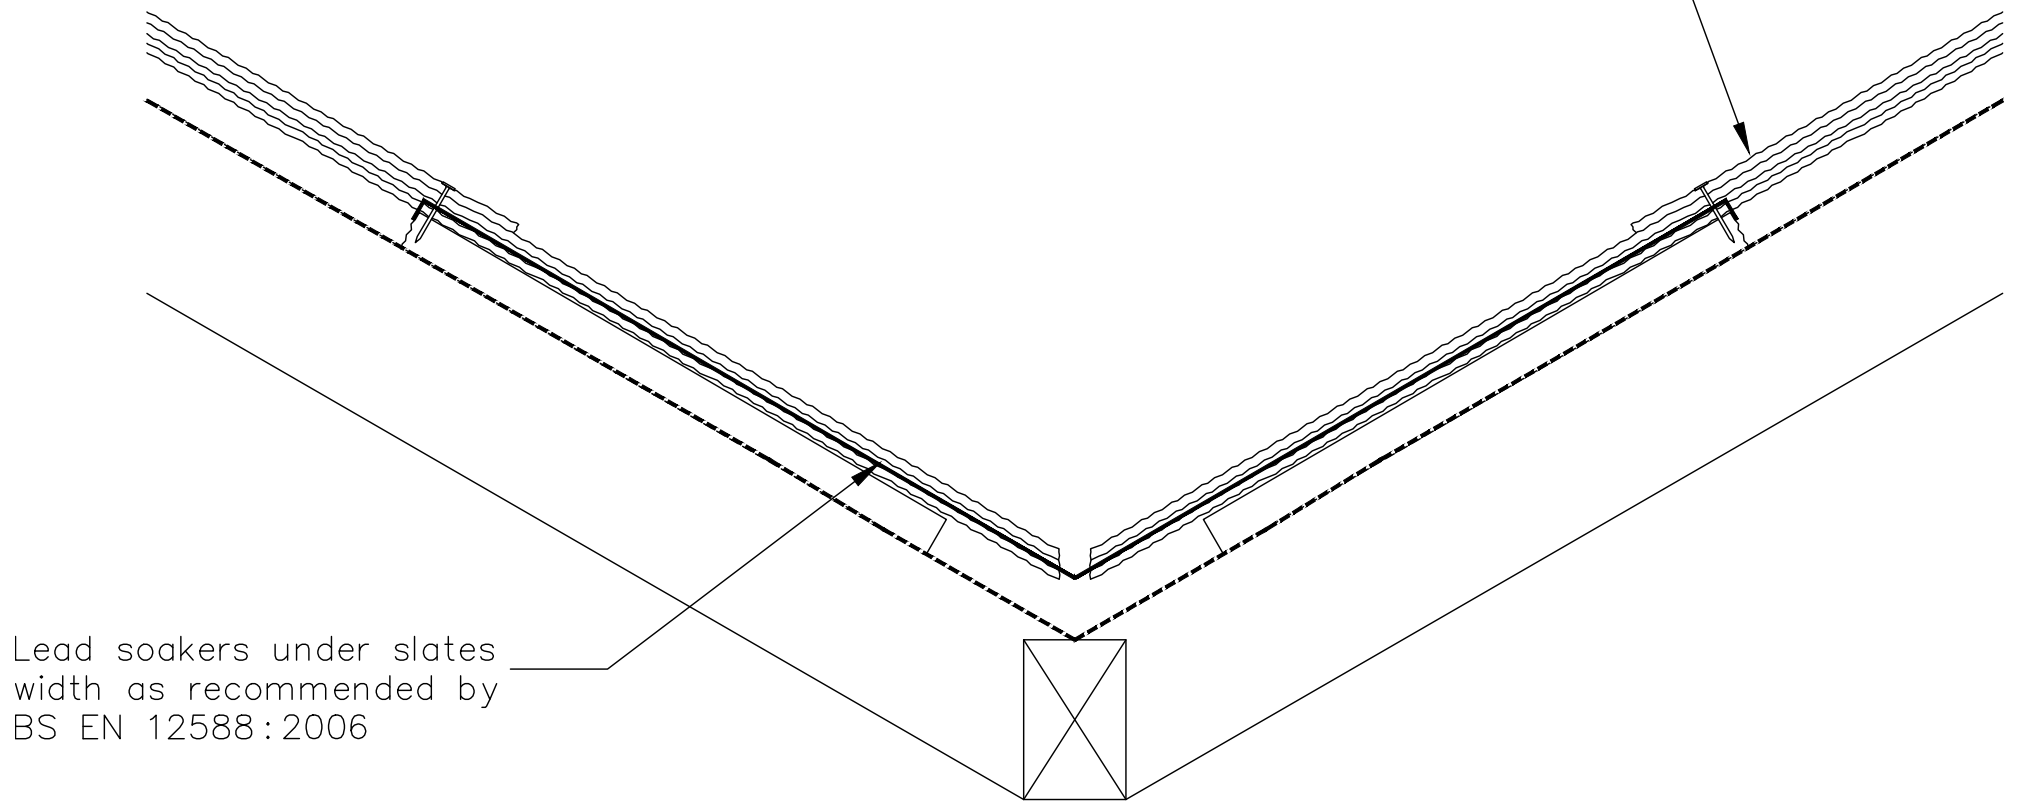

Lead soakers under slates  
width as recommended by  
BS EN 12588:2006

- 1: Grade slates into 3 or 4 groups of equal thickness.
- 2: Lay thicker slates at eaves, thinner towards the ridge.
- 3: Lay slates of equal thickness in the same course.
- 4: Sort slates in each group so that thin end of slates will be towards the ridge.
- 5: Hole slates from the rear.

CEMBRIT LIMITED  
VALLEY GUTTER CLOSE MITRED TYPICAL DETAIL  
508x254 GLENDYNE (NATURAL SLATE)  
DRG No. 580 H62/105, 280 and 635