



Ridge fixing in accordance with manufacturers printed instructions using 2 No. Sela fasteners per ridge tile. Felt cut back at vent location

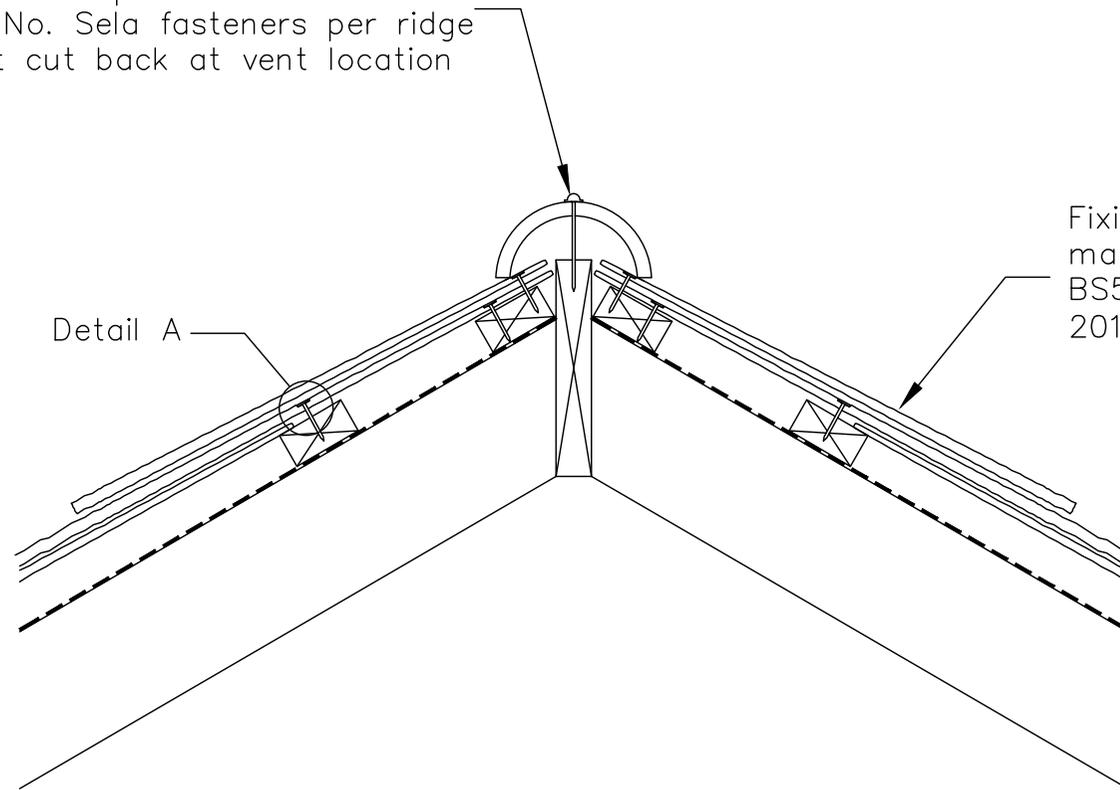

Fixing in accordance with the manufacturers printed instructions, BS5534:2014 + A2:2018, BS8000 part 6 2013 and H62/210 and 275

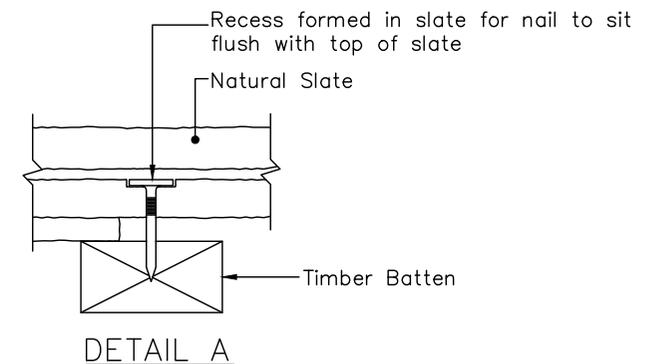

- 1: Grade slates into 3 or 4 groups of equal thickness.
- 2: Lay thicker slates at eaves, thinner towards the ridge.
- 3: Lay slates of equal thickness in the same course.
- 4: Sort slates in each group so that thin end of slates will be towards the ridge.
- 5: Hole slates from the rear.

CEMBRIT LIMITED
 HALF ROUND CONCRETE RIDGE TYPICAL DETAIL
 508x254 GLENDYNE (NATURAL SLATE)
 DRG No. 650 H62/105 and 280