



8 x 190 x 2 @ 57 = 7 JOINTS @ 10 = 704 FRAME

SEE ENLARGED
DETAIL 'C'


SEE ENLARGED
DETAIL 'D'

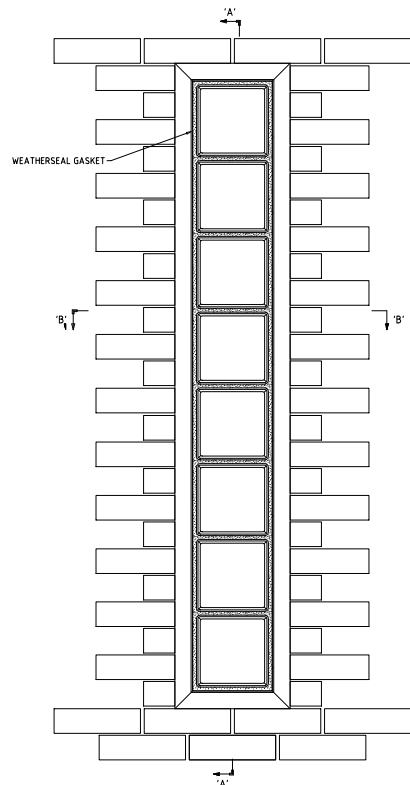


TYPICAL SINGLE ROW PRE CAST GLASS
BLOCK PANEL COMPLETE WITH FRAME

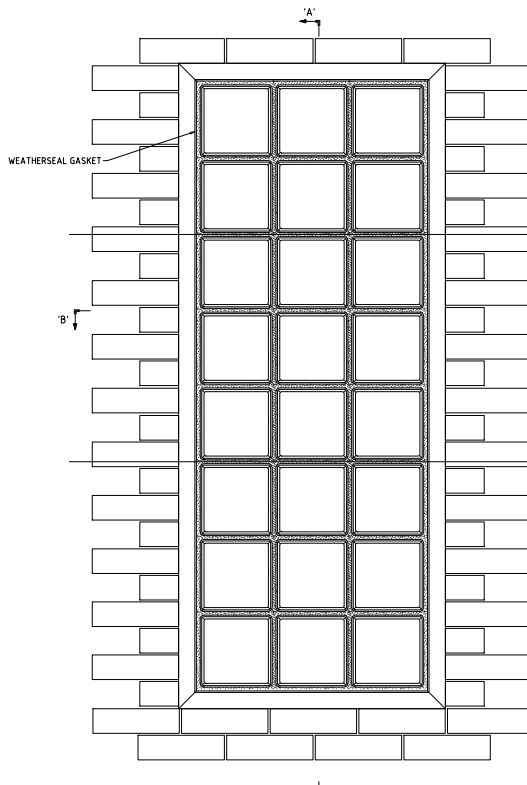


TYPICAL PRE CAST GLASS BLOCK PANEL
COMPLETE WITH FRAME

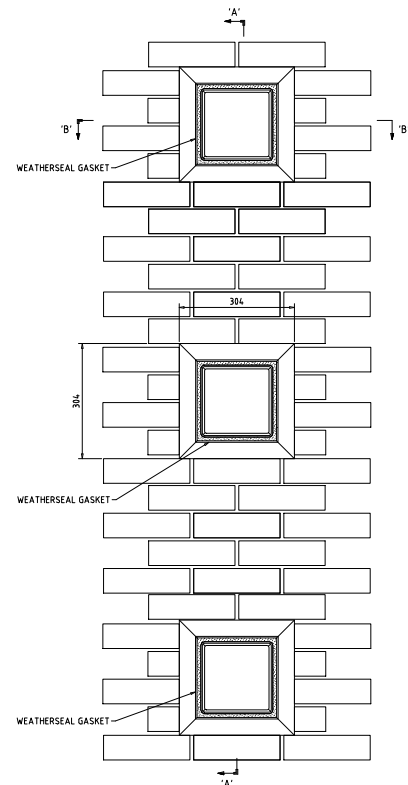


TYPICAL SINGLE PRE CAST GLASS
BLOCK PANEL COMPLETE WITH FRAME

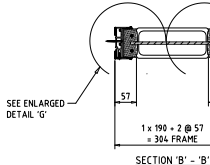


SECTION 'B' - 'B'

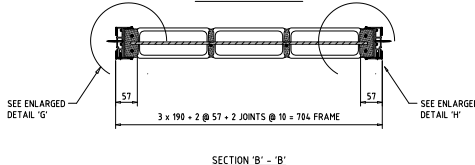


SECTION 'B' - 'B'

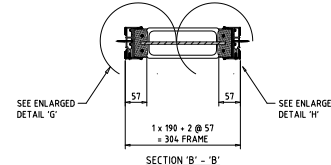

SECTION 'B' - 'B'

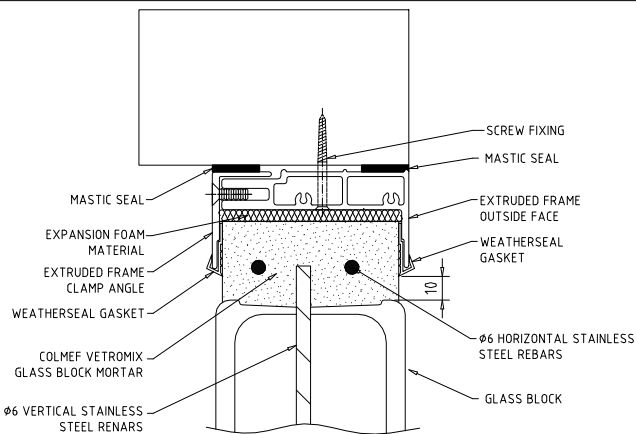

ENLARGED DETAIL 'C'

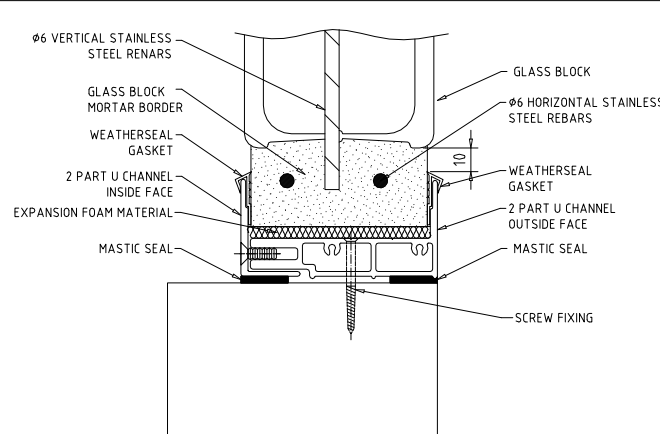

ENLARGED DETAIL 'D'

Guide to Specifying Glass Blocks - General considerations:

1. Glass block walls are self supporting, but not load bearing, in addition to their own weight. They can withstand wind loads, horizontal live loads and impact loads, a limit provided the load for the panel to be anchored into whilst ensuring no downward pressure is placed on the glass blocks.
2. Openings must be square and perpendicular and the opening dimensions must be designed to suit glass block modules. Glass blocks cannot be cut like masonry bricks or tiles. To calculate the minimum opening size based on using 190 x 190 glass blocks with 10mm joints, multiply the number of blocks by 200mm (190 block + 10mm joint) then add 10mm for the other mortar joint. This is the minimum opening requirement. Stone mortar joints are the most commonly used. Stone spacers can also be used for thinner joints, if openings have been prepared incorrectly or if extra installing glass blocks, or to create a tighter radii, when building a curved glass block panel.
3. Glass block walls are connected to the surround by reinforcement bars being inserted into pre-drilled holes for panel sections. For best structural strength, panels should be installed into a four sided pre-prepared opening. The opening can be timber, brick, steel, concrete or block-work.
4. Between the opening and glass blocks it is essential to incorporate expansion joints in the perimeter to allow the panel to expand and contract freely with temperature change. The frame must not be bridged by mortar (render/plaster etc.) and coated with Bedu & Mortar expansion joint sealer (fire-retardant in fire-rated applications).
5. Glass blocks should not be installed when the surrounding temperature is 5°C and falling or 38°C and rising.
6. Using standard glass blocks the maximum panel size without intermediate support or slits joints is 25m², with no dimension exceeding 6m in either direction. For TF30 and TF60 fire blocks, the maximum panel size permissible is 6m² in line with test specification.

Connection details are purely representative to demonstrate the principles how glass blocks can be constructed with U channels, or box sections, either for structural and practical purposes, i.e. inter-leave of glass blocks and render or mastic seal use.

The channel, PFC and box section dimensions are illustrative only and not necessarily to scale.

Connection detail principles, should be designed and be specific to each project requirement and calculations checked and qualified by independent structural engineers.

Accessories - Perimeter expansion joints.
Glass blocks will expand and contract by 0.25mm per 10°C temperature change. Self expansion joints must be incorporated into the perimeter between the substrate opening and block, being caulked with a white silicone for fire-stop mastic. This will usually look similar to a standard mortar joint. For the head and joints of an opening, then this foam is used. This is a white expansion foam. The horizontal expansion joint between the first row of glass blocks and the base of the opening is formed using high-density bitumen or neoprene material to support the weight of the panel. Alternatively two coats of bitumen emulsion can be applied as the barrier between the below course mortar joint and base of opening.

Joint sizes and spacer gaps.
Stone is the most common joint size for specifying and building glass blocks. A 190 x 190 block plus 10mm spacer modules to 200mm. Spacer gaps serve multiple functions: They prevent mortar seepage, increasing the number of courses that can be constructed in a day. They prevent stainless steel reinforcement bars coming into direct contact with the glass blocks as metal and glass have different expansion and contraction properties. When a spacer gap is fitted and the wall is finished, the gaps at the end twist off and can then be ground over.

Other spacers are available for the 80mm-thick blocks-6mm x 6mm and 6mm x 10mm and also for 100mm-thick blocks - 10mm x 10mm.

Panel reinforcement and tying back to the perimeter opening.
Stainless steel ribbed reinforcement bars are used to tie to the opening. The rods penetrate the expansion material and anchor the panel in place by connecting to the perimeter frame. This can be located by drilling an over sized hole a minimum depth of 25-30mm as should be filled with bitumen to cushion any movement of the re-bar. Rods are 600mm long and when the panel is larger than the reinforcement bar, rods are overlapped by a minimum of 500mm and are connected joined using tie wire/cable tie.

One reinforcement bar should be used in each horizontal and vertical joint as a minimum. More rods may be required if using glass blocks or a TF30 or TF60.

For situations where connecting the rods to the opening may prove difficult, bolt anchors can be used (similar to the principle secured by other screws or bolt fixing or can mechanically shif fixed).

Glass blocks specifies mortar - Colmet Vetromix.
Colmet Vetromix is a specially designed and formulated premix mortar for glass block construction ensuring accuracy and consistency of performance. It can be used internally, externally, straight, curved and fire-rated glass block walls. Vetromix has a fine texture, low slump and the without mortar available. It is used as bedding and pointing mix, therefore there are no bonding issues between bedding and pointing. Pointing instructions are on the reverse of each bag and should be strictly adhered to. 18 litres will add approximately 140kg x 190 x 190 blocks. The surrounding temperature should not be 5°C and falling or 38°C and rising and the joint width should not exceed 12mm.

Jointmen joint sealer/sealer.
After construction, the perimeter joint should be cleared of any residue mortar and caulked with Bedu & Mortar expansion sealer for fire stop mastic. Bridging the joint would restrict flexibility and movement and negate the expansion force and can cause glass blocks or joints to crack.

How a mortar joint works.
Glass Block Technology mortar is a specially formulated premix bedding and finishing compound, available in one bag to be used with mortar. It is manufactured under factory controlled conditions so all additives are accurately blended and designed for maximum performance of strength, flexibility, wear resistance and resistance to water and salt. It cures in reaction to air just like mortar mortars, so it is important that the joint size is not too small. This prevents total curing and keeps strength. Total curing is achieved after 21-28 days.

Glass is impervious unlike brick and concrete, therefore mortar is not absorbed into a glass block. The strength and support of a joint is created by the shape of the mortar profile itself. The edge or collar of a block is covered so when two are laid next to each other an even joint is created. This even joint allows the mortar to flow into the joint and create a strong bond. The mortar is then cured and the joint is ready to resist impact or applied loads resulting in the panel being stable and self-supporting, but not load bearing. It is important that the reinforcement bars are correctly installed and the surrounding temperature, whilst also giving the panel integral support and a wind-loading value. The minimum recommended joint size is 10mm.

However, this is only the distance on show, the centre of the oval joint is always deeper than the collar or collar. This area houses the stainless steel reinforcement bars, which should never be in direct contact with the glass surface.



170 Lodge Lane, Hyde, Cheshire SK14 4LB
projects@glassblocks.co.uk
www.glassblocks.co.uk
twitter: @glassblocks
Tel: 0161 612 8893
Fax: 0161 285 1503

The data sheet connection detail & construction principles, should be designed and be specific to each project requirement or environment & calculations checked and qualified by independent structural engineers.

All information is accurate to the best of our knowledge at time of data sheet production, however Glass Block Technology Ltd. cannot be held liable in any way regarding the usage of glass blocks and the manner in which they are installed. Glass Block Technology Ltd. reserve the right to amend or correct changes at any time.

PRECAST WALL PANELS
WITH U CHANNEL CLAMP

GBT109 Rev.

Scale 1:7.5 & 1:2.5